


K 标牌(国外)
K PLATE (OVERSEAS)

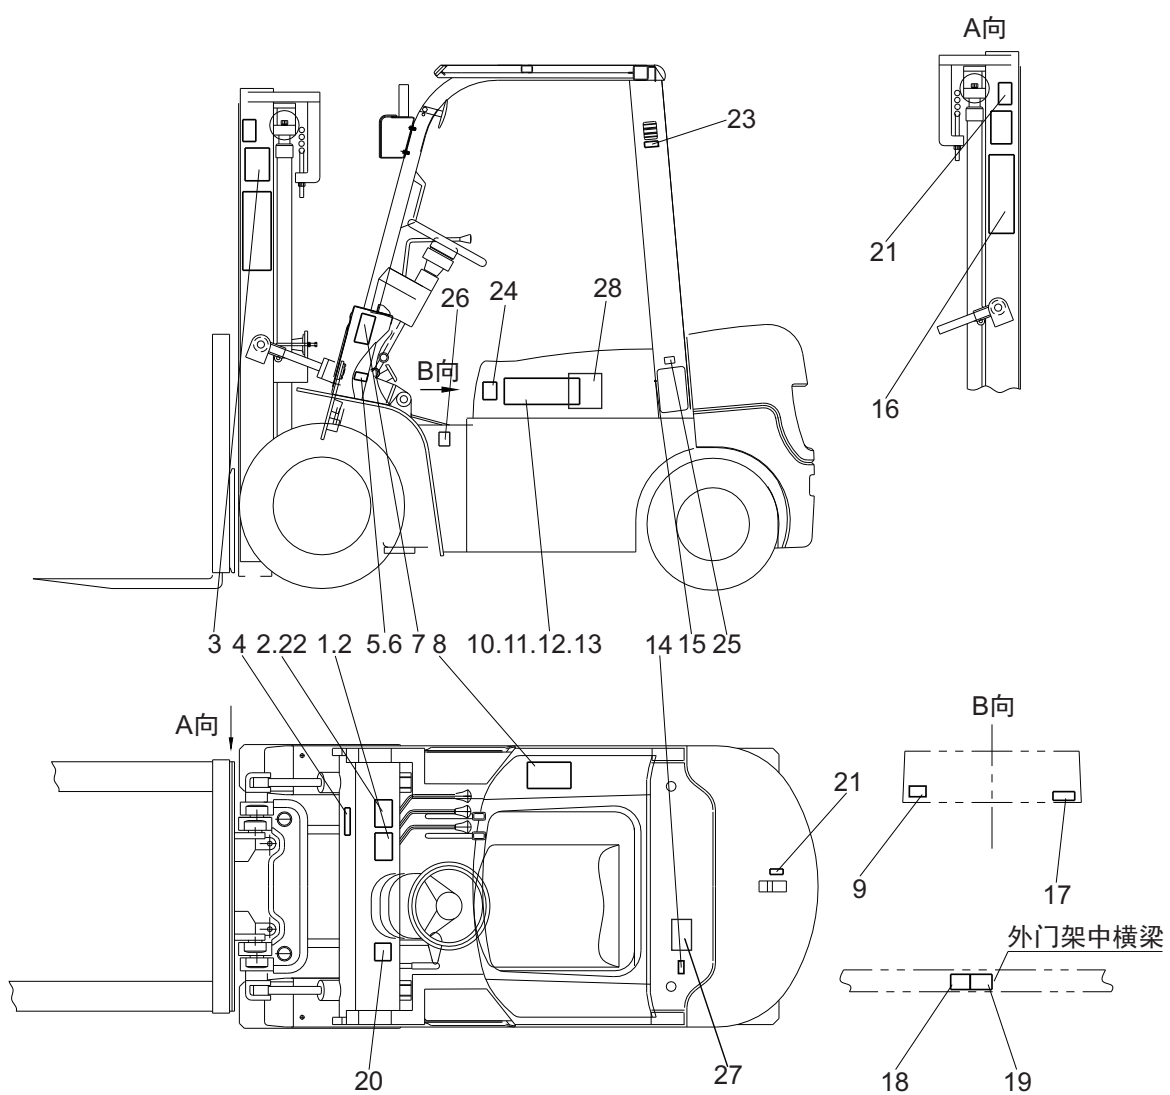

K 标牌 (国外)
K PLATE (OVERSEAS)

序号 Item No.	图号 PartNo.	版本 Edition	零部件名称	Description	件数 Q'ty	备注 Remark	适用时间 Applied time
A	KM919-10011	D08	标牌安装	Plate	1		
01	6TY10-00-195	D01	门架实际承载能力铭牌	Name plate	1		
02	B2180-04006	00	铆钉4x6	Rivet	8	GB827-86	
03	6TY40-01-30	D00	安全标志标牌	Plate, safety	2		
04	6TY40-02-55	D00	润滑系统图标牌	Plate, lubrication chart	1		
05	6TY40-16-115	D00	轮胎气压(2-2.5t)	Plate, tire pressure	1	2-2.5t	
06	6TY40-16-116	D00	轮胎气压(3-3.5t)	Plate, tire pressure	1	3-3.5t	
07	6TY40-08-21	D00	轮胎安全标牌	Plate, tire safety	1		
08	6TY40-03-38	D00	使用须知标牌	Plate, HELI forklift truck	1		
09	6TY40-05-21	D00	加液压油标牌	Plate, instruction	1		
10	6TY40-00-1026	D00	K系列2t吨位标牌	Plate, adding hydraulic oil	2		
11	6TY40-00-1027	D00	K系列2.5t吨位标牌	Plate, model	2		
12	6TY40-00-1028	D00	K系列3t吨位标牌	Plate, model	2		
13	6TY40-00-1029	D00	K系列3.5t吨位标牌	Plate, model	2		
14	6TY40-09-16	D00	加防冻液标牌	Plate, model	1		
15	6TY40-07-15	D00	风扇安全标牌	Plate, antifreeze liquid	1		
16	6TY40-00-398	D00	HELI 标牌	Plate, fan safety	2		
17	6TY40-06-110	D00	容量标牌(2-3.5t)	Plate, HELI	1		
18	6TY40-14-16	D00	禁止进入门架后空间标 牌	Plate, capacity	1		
19	6TY40-15-18	D00	注意伤手标牌	Plate, padlok mast space	1		
20	6TY40-13-25	D00	停车制动调整标牌	Plate, notice thumb hand	1		
21	6TY40-10-20	D00	起吊标牌	Plate, brake	2		
22	6TY10-00-87	D03	叉式装卸车铭牌(全英 文)	Plate, crane loading	1		
23	6TY40-34-14	D00	严禁冲水标牌	Plate	1		
24	6TY40-108-01	D00	气弹簧安全锁标识	Plate, no washing	1		
25	6TY40-04-21	D00	加燃油标牌	Plate, shock absorber safety lock	1		
26	6TY40-172-04	D00	加注制动液标牌	Plate, fuel	2		
27	6TY40-26-07	D00	铝制水箱警告标牌	Plate	1		
28	6TY40-20-09	D00	蓄电池使用保养注意事 项标牌	Plate, caution	1		
29	6TY20-00-575	D00	负载曲线图标牌	Plate, Battery maintenance	1	2t	
30	6TY20-00-576	D00	负载曲线图标牌	Plate, capacity chart	1	2.5t	
31	6TY20-00-577	D00	负载曲线图标牌	Plate, capacity chart	1	3t	

K 标牌（国外）
K PLATE (OVERSEAS)

序号 Item No.	图号 PartNo.	版本 Edition	零部件名称	Description	件数 Q'ty	备注 Remark	适用时间 Applied time
32	6TY20-00-578	D00	负载曲线图标牌	Plate, capacity chart	1	3.5t	